

 

## How To Use The Remote

- 1) To begin, press **ANY** button to wake up the remote long press the **ON/OFF** button to toggle between **MANUAL** and **SETTINGS** mode **MANUAL** mode, **ON/OFF** functions and Brightness can be adjusted with +/- buttons. Only the brightness indicator is illuminated **SETTINGS** mode, all settings can be adjusted and are illuminated
- 2) Adjust remote settings with the corresponding buttons on the remote
- 3) Press **SEND** to send saved settings to sensor
- 4) Press **SEND** to send saved settings to any additional sensor

## LED Indicators and Function




Will flash when settings are sent by pressing SEND

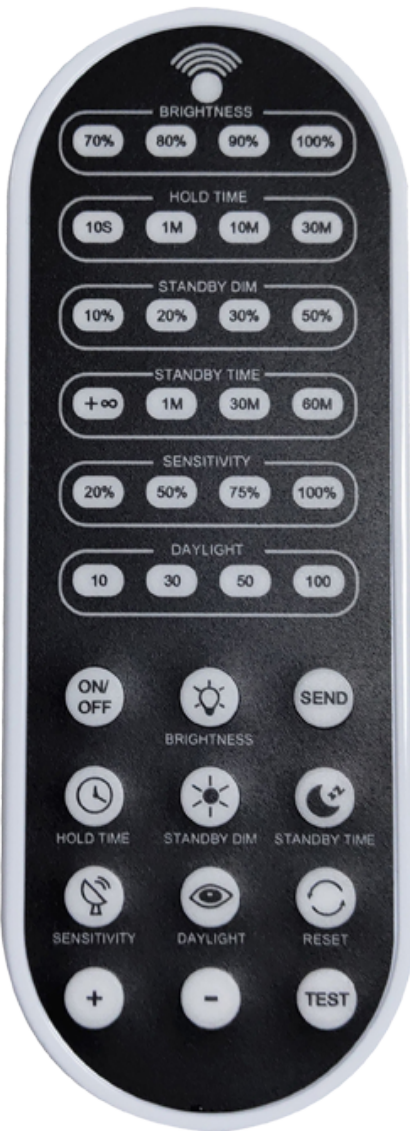


### BRIGHTNESS

Adjust max output level from 100-70%

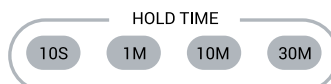


### HOLD TIME SETTING

After last detected motion, amount of time to hold light at 100% or selected **brightness** from; 10s up to 30min

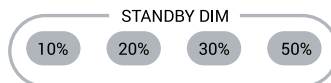


### Stand-by Dimming Level Setting

No motion dimming level from; 10% to 50%  
If no motion is detected for the selected **hold time**, the light will dim down to 10%/20%/30%/50%.  
The light will remain off or dimmed for the selected stand-by time. Once motion is detected, light returns to set brightness level

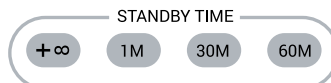


### Stand-by Time ((Period) Setting

No motion dimming stand-by time in minutes; 1m to infinity "+∞" - Light will remain dimmed until motion is detected. Photocell function is disabled

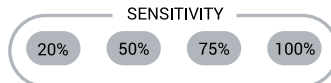

### Sensitivity (Detection Range) Setting

100% - 20% detection range  
Actual detection distance varies by mounting height  
Refer to sensor field of view diagram

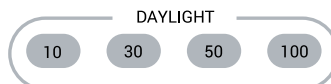

### Daylight Sensor Setting

Set the **ambient lux level**. Sensor will turn light **ON** once below level, and **OFF** above level; 10 lux up to 100 lux.

## Buttons



Long press until brightness indicator (first row) is on to alter settings. Press to turn fixture **ON** or **OFF**



Adjust brightness level



Send settings to the sensor or additional sensor. Required to save settings



Adjust hold time



Adjust dimming level



Adjust stand-by time



Adjust sensitivity setting



Adjust the ambient lux level. Long press to toggle on/off



Revert to dip switch settings.



**Manual dimming adjustment**  
Press to manually increase or decrease dimming level



Test mode. **Hold time** is 3s