




INSTALLATION INSTRUCTIONS

BLD-CM08E-YYY Emergency LED Driver

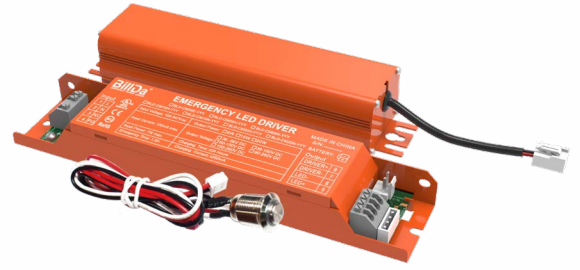

OVERVIEW

WHAT'S IN THE BOX

- BLD-CM08E-YYY Emergency LED Driver
- 1 PC indicator & test button

IMPORTANT

When using electrical equipment, basic safety precautions should always be followed, including the following:



WARNING AND SAFETY

- Risk of fire or electric shock. This LED Emergency Backup installation requires knowledge of luminaire electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician.
- Before installing, make certain the AC power to the fixture is off.
- The electrical rating of this product is 100-277Vac. Installer must confirm that there is 100-277Vac to the fixture before installation.
- To prevent electrical shock only mate unit connector after installation is complete and before the AC power to the fixture is back on.
- Do not use in outdoor.
- This LED Emergency Backup unit requires an un-switched AC power source of 100-277Vac, 50/60Hz. The AC driver must be on the same branch circuit as the LED Emergency Backup unit.
- Do not let power supply cords touch hot surfaces.
- Do not mount near gas or electric heaters.
- Do not connect battery pack connector until all other wiring is complete and AC power is on.
- The emergency LED driver is for use with grounded, UL listed LED luminaires, shall be enclosed by the LED luminaire and bonded to the grounding of LED luminaire.
- Verify that all replacement lamp types marked on the installed luminaire are also identified as suitable for use with this emergency battery pack.
- The battery pack is fixed by screws and the indicator light is installed on the surface of luminaires.
- Equipment should be mounted in locations and at heights where it is not be subjected to tampering by unauthorized personnel.
- The use of accessory equipment is not recommended by the manufacturer and may cause an unsafe condition
- Do not use this equipment for other than its intended use.
- Use with grounded, UL Listed, dry or damp location rated fixtures.

WIRING DIAGRAM (100-347VAC)

- **CAUTION:** COMPLETE NOT MATE AND AC CONNECTOR POWER IS UNTIL SUPPLIED. INSTALLATION IS COMPLETE AND AC POWER IS SUPPLIED.
- **CAUTION:** TEST ACCESSORY LEADS-OBSERVE PROPER POLARITY WIRING.

