



PT2 SERIES
POLE TOP LUMINAIRES

Installation Instructions for:

PT2 Series Pole Top Luminares

PT2-504-1 | PT2-1004-1 | PT2-1504-1



WHAT'S IN THE BOX

- PT2 POLE TOP LUMINAIRE

WHAT YOU'LL NEED (NOT INCLUDED)

- SAFETY GLASSES
- WIRE CUTTERS
- SCREWDRIVER
- M8 ALLEN KEY

WARNING


- To prevent personal injury or product damage only licensed electricians should install.
- To avoid electrical shock or component damage, disconnect power before attempting installation or servicing.
- This product must be installed in accordance with the national electric code (NEC) and all applicable federal, state/provincial and local electric codes and safety standards.
- Disconnect product and allow cooling prior to any further steps.
- Any alteration or modification of this product is expressly forbidden as it may cause serious personal injury, death, property damage and/or product malfunction.

IMPORTANT

Before assembling your fixture, please make sure that you carefully read through this instruction sheet.

Note: The important safeguards and instructions that appear in this sheet are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution, and care are factors that cannot be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture

LUMINAIRE OVERVIEW

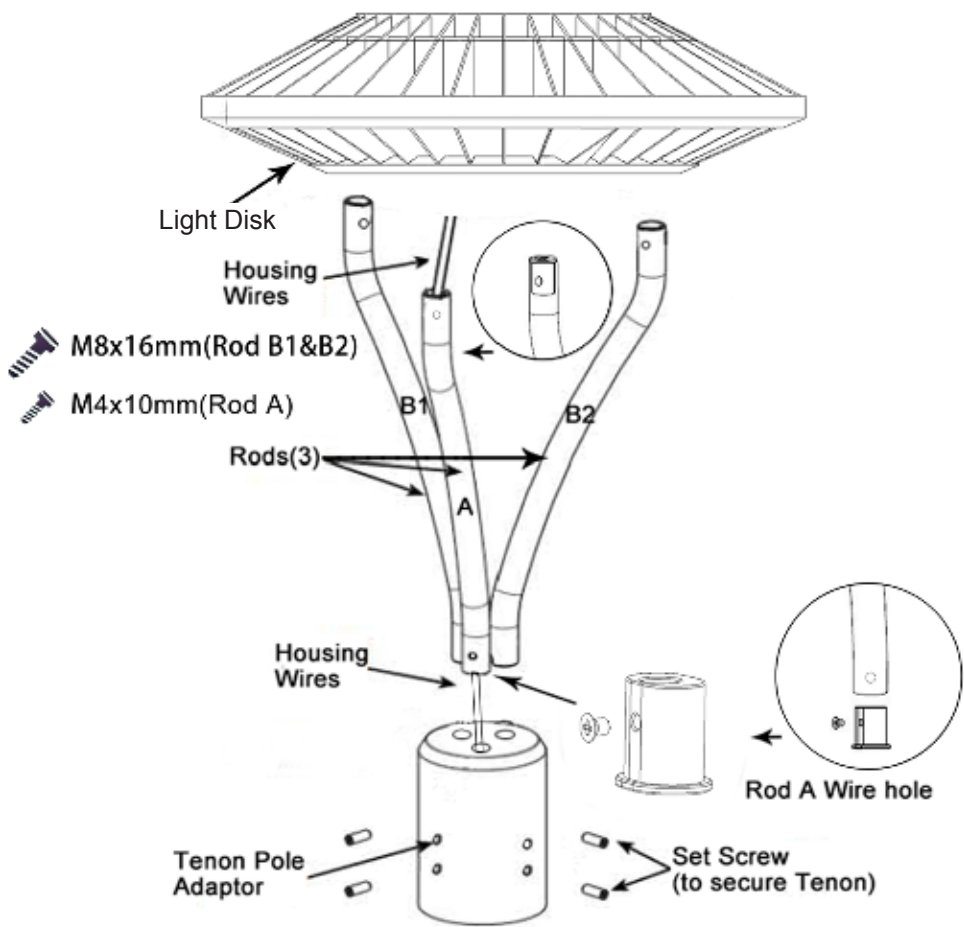


AC Power(100-277Vac 50/60Hz)		LED Driver AC input	
(black) N			L (brown)
(white) L			N (blue)
(green/yellow) G			G (green/yellow)

DANGER
ELECTRIC SHOCK
KEEP SHOCK WIRE CONNECTED

TO ASSEMBLE & INSTALL THE LUMINAIRE


1

Of the three mounting points on the light disk, locate the point that has one large hole and two smaller holes on each side. This is the one to use for wiring. Run the wire through the center large hole.

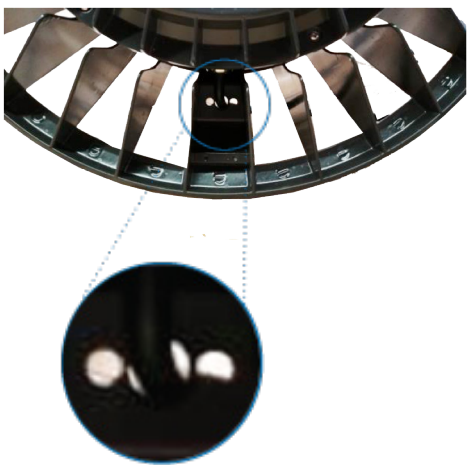

2

One of the Rods comes with a large hole in the center and two smaller holes on the side. There is an end block secured by a fixed screw. Remove the fixed screw and run the wire through it.

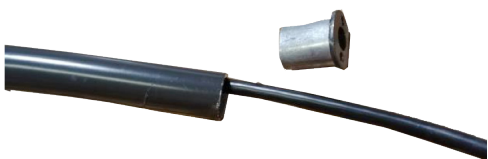

3

Then run the wire through the end block.



4

Secure the end block back onto the Rod.



5

Affix each of the three Rods onto the light disk. Secure the rod with the wire running through it with M4 screws. Use M8 screws for the other two rods.



6

Next, run the wire through the Pole Adaptor.



7

Lay the fixture upside down and fit the Rods into the Adaptor.



8

Secure the rods onto the Adaptor using the M4 and M8 screws accordingly.



9

The luminaire is now ready to be installed. Connect the wire to line voltage (100-277VAC) and use the provided Set Screws to secure the Pole Adaptor onto the pole (provided Adaptor works with 3" Ø poles).

The luminaire assembly is now complete. You can now proceed with installing the fixture.