




## FPH SERIES

### Drywall Kit Installation Guideline

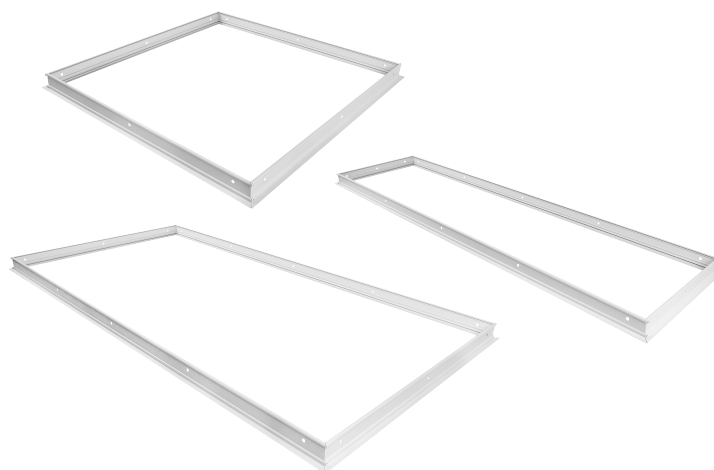







#### INSTALLATION INSTRUCTIONS FOR

FPH-14DMK

FPH-22DMK

FPH-24DMK

#### WHAT'S IN THE BOX

Item	Picture	Qty
Drywall flange kit A		1'X4' (2pcs)
Drywall flange kit B		2'X2' (4pcs) / 2'X4' (2pcs)
Drywall flange kit C		1'X4' (2pcs) / 2'X4' (2pcs)
ST3*12 Wafer Head Self Tapping Screw		8pcs+1pcs spare screw
SR4.2*30 Countersunk head self tapping screw		2'X2' (12pcs+1pcs spare screw) 1'X4' (16pcs+1pcs spare screw) 2'X4' (16pcs+1pcs spare screw)
Anchor		2'X2' (12pcs+1pcs spare anchor) 1'X4' (16pcs+1pcs spare anchor) 2'X4' (16pcs+1pcs spare anchor)

#### WHAT YOU'LL NEED

- #2 Phillips screwdriver
- Drill with bit sized to fit mounting hardware/screws
- Wood for blocking, or hanger wire (field supplied, as required)

#### IMPORTANT


Before installing, read all instructions and retain for future reference. The important instructions and safeguards that appear in this document are not inclusive of all possible conditions and situations that may occur. It must be understood that common sense, caution, and care are factors that cannot be built into a product. These factors must be supplied by those that care and operate the fixture. Consider a qualified licensed electrician for installation.

For additional information required not covered in this document please contact a local representative.

# INSTALLATION

1

Remove the pieces from the package carefully. Fasten the four sides of the drywall mounting kits together with the supplied self tapping screws.

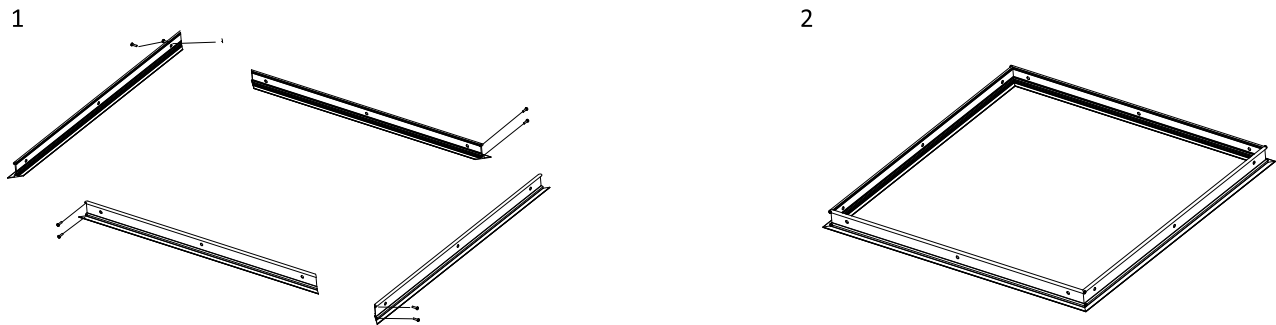

2


Cut-out opening in drywall to match drywall mounting kit size.

Item, Size	Cut-out Opening Size
FPH-14DMK, 1'x4' fixture	48 11/16" (1236 mm) x 12 3/4" (324 mm)
FPH-22DMK, 2'x2' fixture	24 5/8" (625 mm) x 24 5/8" (625 mm)
FPH-24DMK, 2'x4' fixture	48 11/16" (1236 mm) x 24 7/16" (620 mm)

3


Place the assembled drywall mounting kits into the hole and secure to ceiling with field supplied wood blocking or hanger wire.

## Wood Blocking

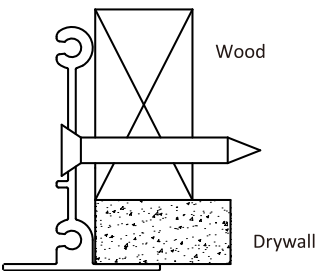

Wood blocking  
supplied by others

## Hanger Wire

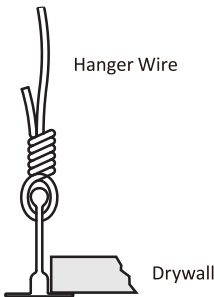

Hanger wires  
supplied by others.

## INSTALLATION CON'T

4

Insert flat panel into the drywall mounting kit and follow flat panel instructions to complete installation.

